H005

## Functions Directive settings

| Funcution | Directive |
|---|---|
| Setting administrator password | * 12 # 123456 # New administrator password # repeat the new administrator password # |
| Change Administrator password | * 12 # Administrator password # New administrator password # repeat the new administrator password # |
| Change user password | * 10 # User password # New password # repeat the new password # |
| Add mobile phone Administrator | * 83 # Adminstrator password # |
| Add password/IC card/ Fingerprint | * 85 # Adminstrator password # |
| Delete all IC card | * 69 # Adminstrator password # |
| Delete all Fingerprint | * 70 # Adminstrator password # |
| Delete all Password(Except Administrator password) | * 71 # Adminstrator password # |
| Tamper proof alarm | Start: * 32 # Administrator password # 1 # Close: * 32 # Administrator password # 0 # (If without administrator password, useing 123456 as the administrator password) |
| Voice switch | Chinese: * 39 # Administrator password # 1 # English: * 39 # Administrator password # 2 # (If without administrator password, useing 123456 as the administrator password) |
| Demo mode start | When without administrator, input 24679 # |
| Motor aging tests | When without administrator, input 35896 # |
| Temporary normally open | After unlocking, input 123 # |

Add/delete remote control, (Remote control setting key on the back of the motherboard

Add remote control: hold down the remote control setting key, release after five rings, press any key of the remote control to be added and hear "drip drip" three times, indicating that the addition is successful.

Delete all remote controls: press and hold the "remote control setting" button, ring 12 times to release, that is, delete all remote controls

# Waterproof fingerprint smart lock manual

# (TT LOCK)


Fit for Apartment room door lock, home door lock, office door lock

## Function setting button


In the initialization state, tap the button to add the Bluetooth administrator settings; DOUBLE click to enter the Administrator password settings; long press around 3 seconds to restore the Factory settings(Initialization password is “000#”).

Remark: Adding Bluetooth Administrator can only be done in the initialized state.


1.Adding Bluetooth administrator operation: Download and install: TTLock” in the Mobile App store.

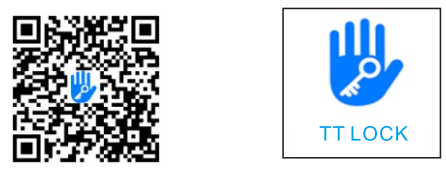



2. Entering into App registration and login your mobile phone account, click “+” and select “Door lock” and start your Bluetooth on your phone at the same time, then click “Next” and wake up lock screen at the same time, add the searched device and name the lock.

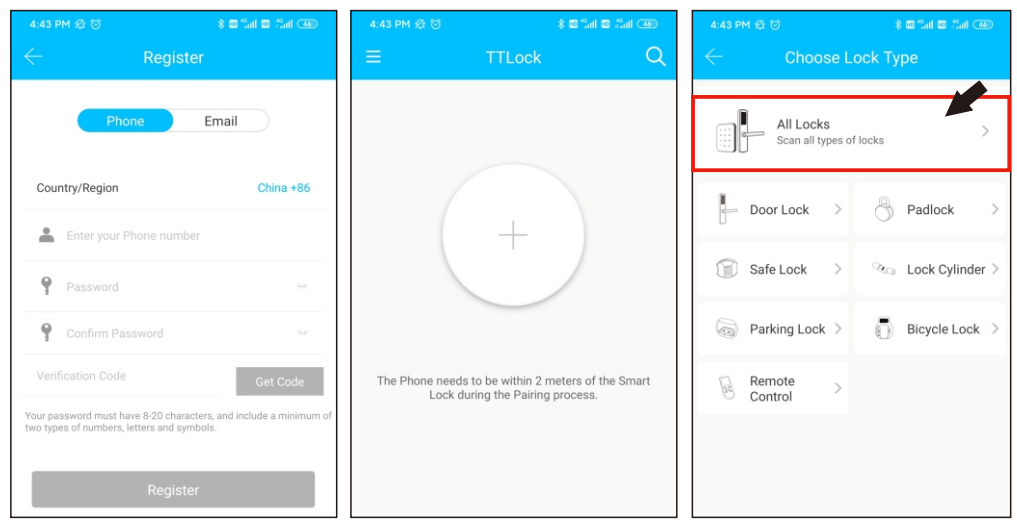



Rename Device

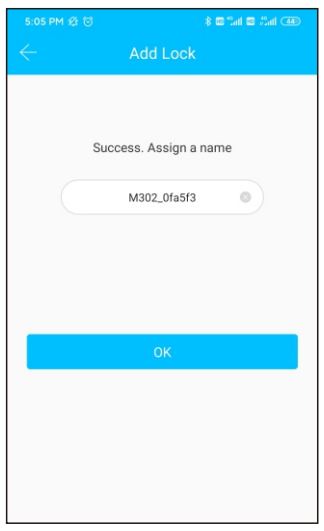


Now enter the interface and tap on the Bluetooth signal to unlock the lock within range of the Bluetooth signal.

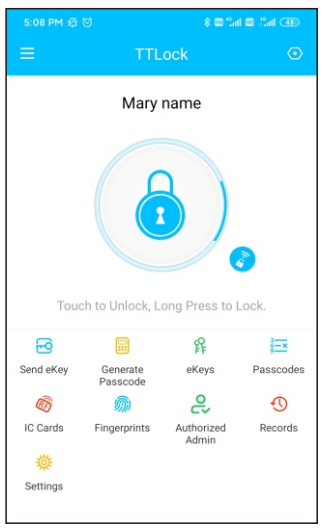


3. Below the Bluetooth unlocking there some functions operation options, support Mobile phone setting up Fingerprint, Password, IC card add and delete.

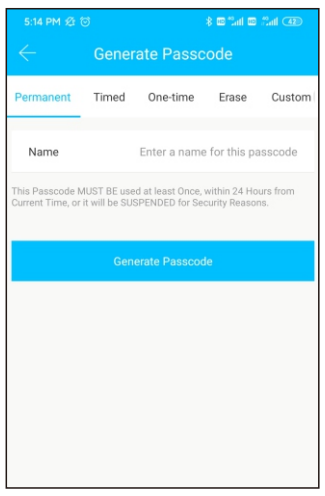






Remark: The options of Generate Passcode were setting by the user, other function options of password were generate by the system automatically(Generated password must active within 24 hours(Using One time), otherwise will invalid automatically.

## Technical Parameters

| | |
|---|---|
| Working Voltage | 4X AA 5# alkaline batteries (Not include) |
| Static current | < 55μA |
| Unlock ways | Fingerprint, Card, Password, Key (Optional for App or Remote control) |
| Working current | < 280mA(Strong Drive) |
| Fingerprint Capacity | ≤100 |
| Card Capacity | ≤100 |
| Password Capacity | ≤100 |
| Remote control capacity | ≤30 |
| Working Temperature | -10℃~+60℃ |
| Humidity | 20%~93% |

## Interface specification

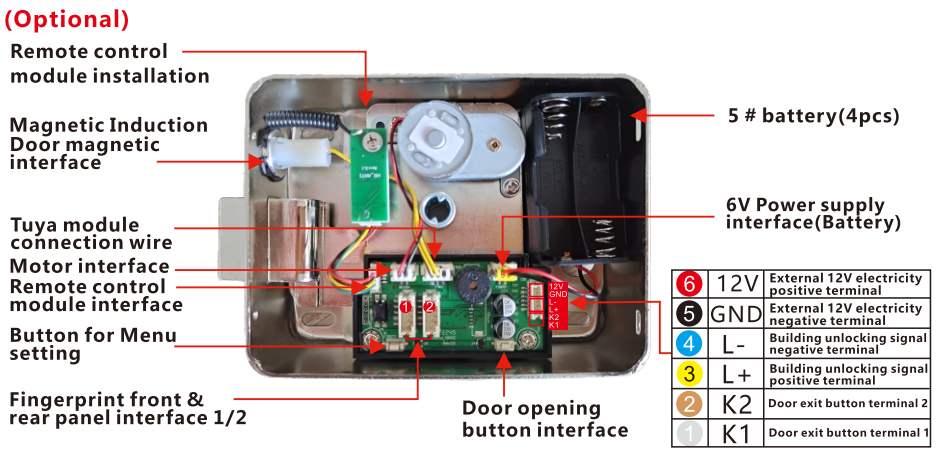


## Install Diagram

